

Operating instruction 2340

Commissioning




Rotary button

To open, enter the factory code 0 (left) 0 (right) to open.


↪ If the code is to be changed, turn the rotary button to the left until it is above the resistance, hold it there and set the new code.

Release the rotary button = New code is Now saved.
Blur code

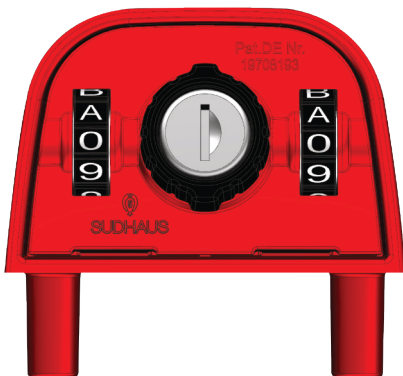

If you have forgotten the code you set we offer you a simple solution: Simply ask us for the SUDHAUS code finder for lock 2340


Emergency opening

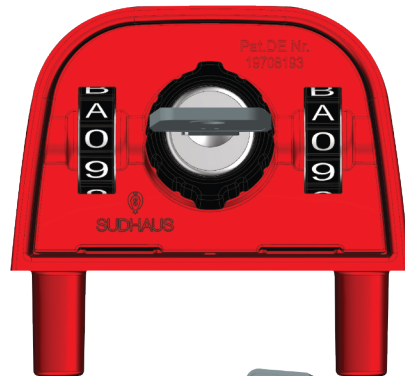

Insert key


↪ Turn the key to the left as far as it will go. The lock opens, without knowing the set code.

Release the rotary button = New code is Now saved.

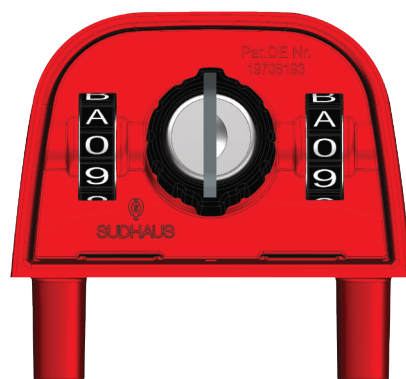


Operating instruction 2340


Code finding

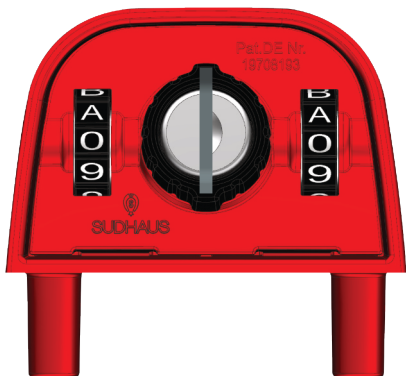


Open the lock with the key.

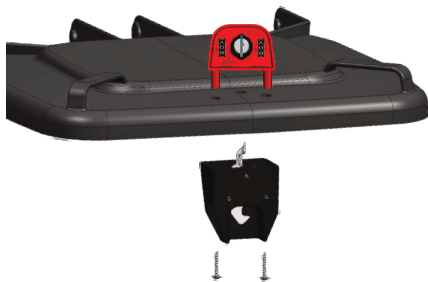

Open the cover and unscrew the upper part of the lock from below. Now look at the upper part of the lock from below.

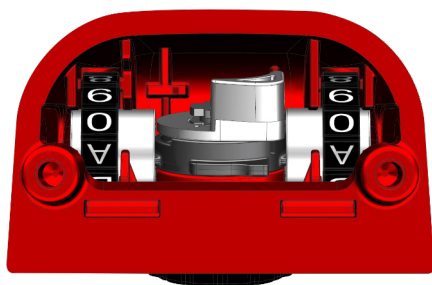


Look into the upper part of the lock from below so that the rotary button points in your direction.

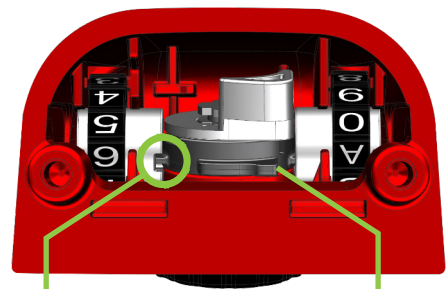


short groove locking lug

Turn the left gear wheel until the short groove of the gear wheel is above the locking lug of the rotary button.

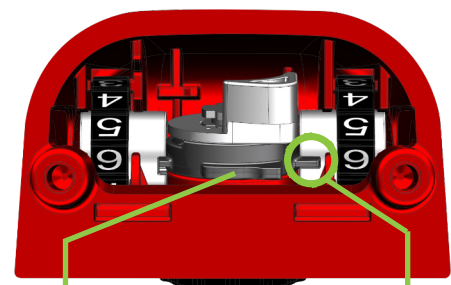

locking lug long groove

Turn the right-hand gear until the long groove of the number wheel is above the locking lug of the rotary button.

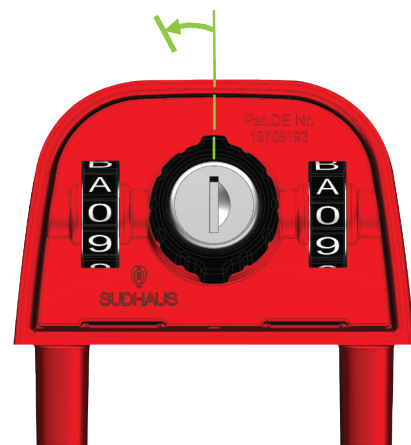


If the correct code is set, the rotary button should now have some play.




Operating instructions 2340

Opening aid

- 1 Carefully insert the opening aid on the outer edge of the right or left gear until it meets the inner hub.

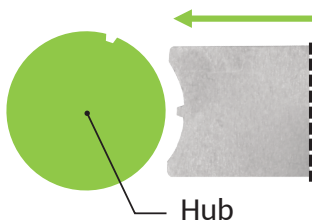


- 2 For the next step, slowly move the opening aid up and down the hub.

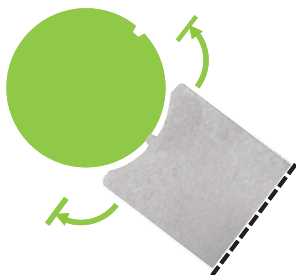

You scan along the hub and test every possible code selection until you feel a slight, central click. If you do not feel any engagement, remove the opening aid and turn the gearwheel to the next position. Repeat this process until the opening aid easily engages on one gear position.



The engagement point is in the centre of the set code point.

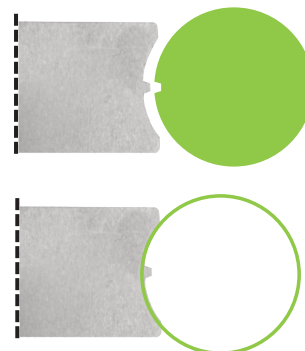

- 3 Once you have found the first code position, insert the opening aid at the outer edge of the second gear wheel and repeat the previously described procedure. As soon as the complete code has been set, the rotary button can be operated and the lock opened.



MADE IN GERMANY

23-08-2022



SUDHAUS GmbH
Tel: +49 (0)2371 906-0

Teichstraße 5
Mail: info@sudhaus.de

58644 Iserlohn
www.sudhaus.de