




EN


QUICK GUIDE FOR ASSEMBLING THE DUSTBIN LOCK WITH DRILLING FIXTURE 2300-600




Suitable for 4-wheel bins

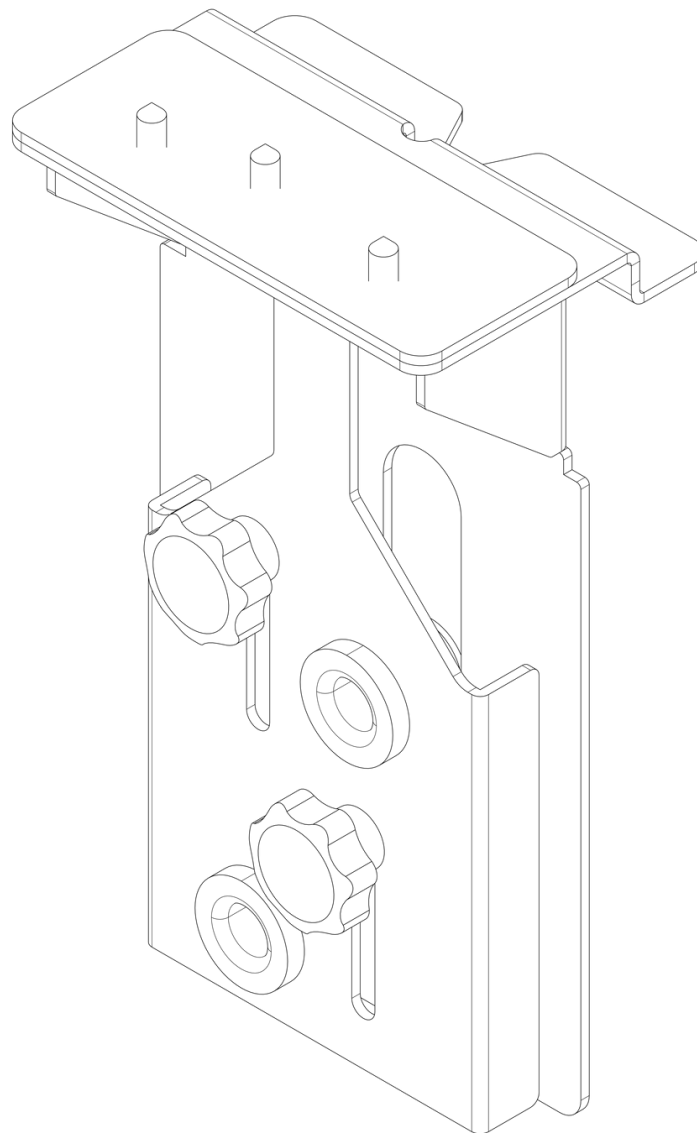


>>> TECHNICAL INFORMATION

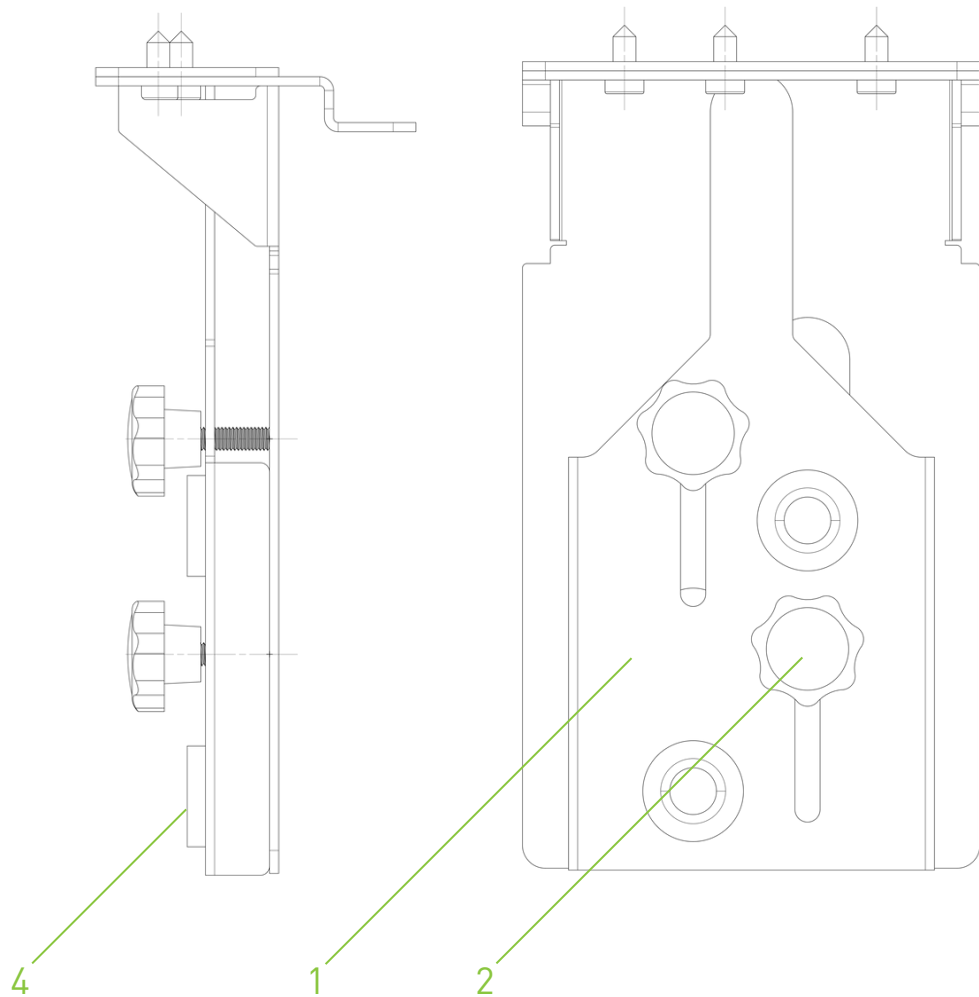

- 1.adjustable slide
- 2.star knob screw
- 3.stamping plate
- 4.drill bushings

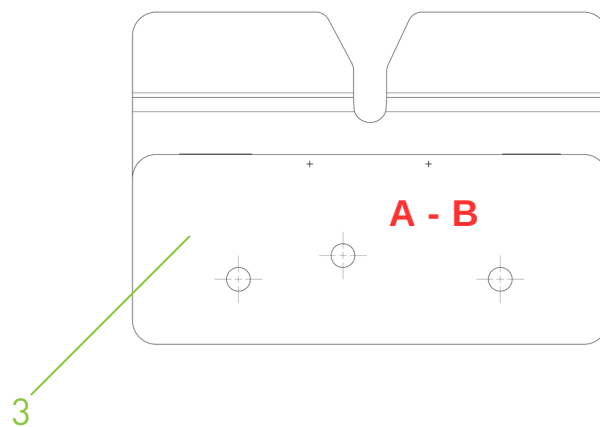

>>> COMPATIBILITY OVERVIEW

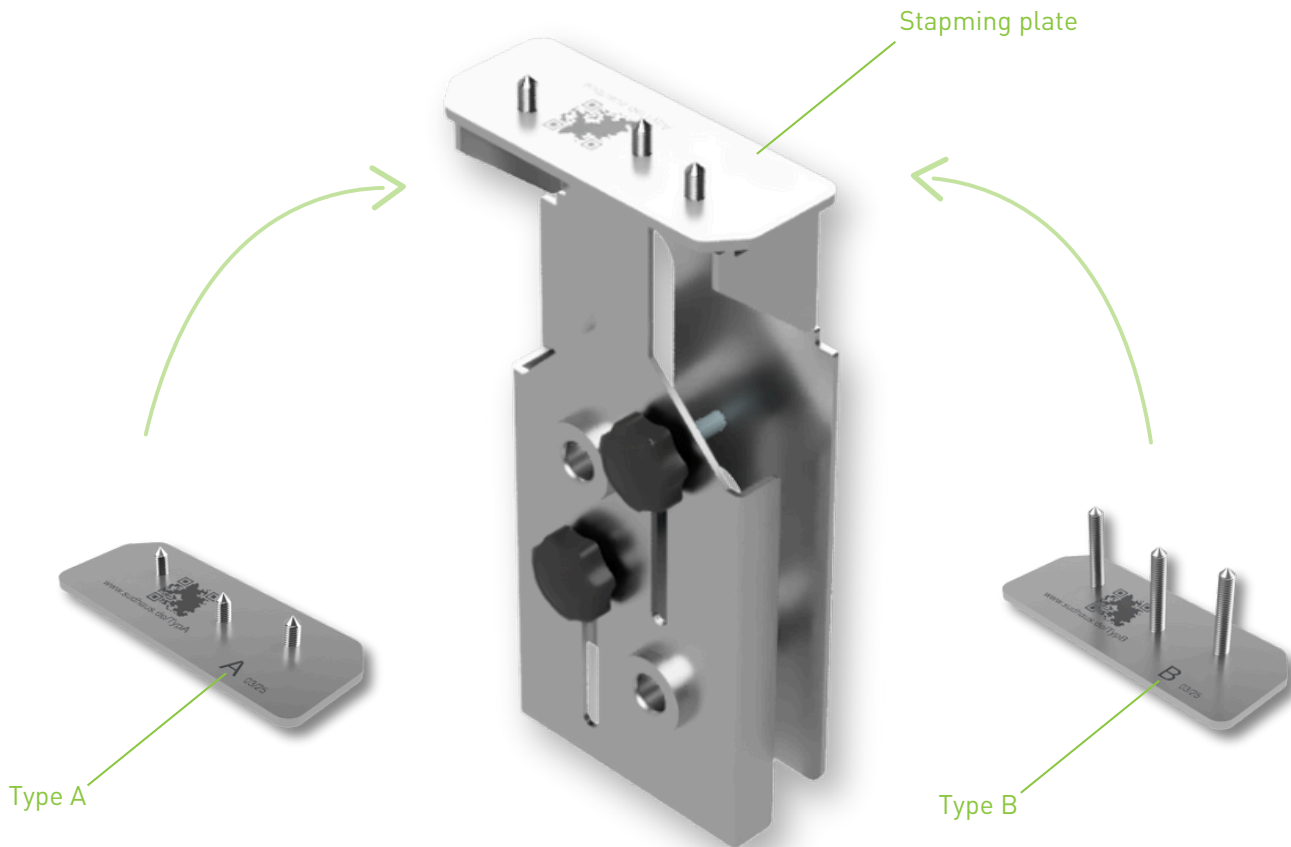

>>> TYPE A

Compatibility List A – This stamping plate is suitable for specific dustbin types. Please check the corresponding compatibility overview to see which dustbins are compatible.

www.sudhaus.de/TypA



DE/EN

>>> TYPE B

Compatibility List B – This stamping plate is suitable for specific dustbin types. Please check the corresponding compatibility overview to see which dustbins are compatible.




www.sudhaus.de/TypB



DE/EN



>>> STEP 1

Measure the center of the bin body and mark it with a pointed tool or sharp object.

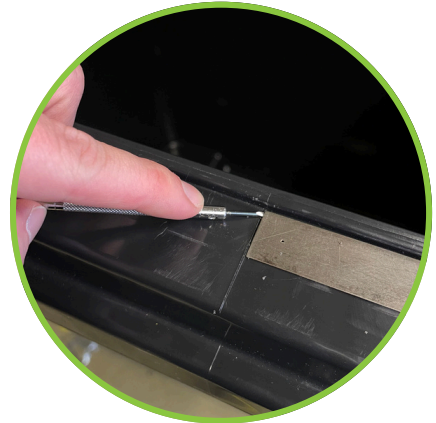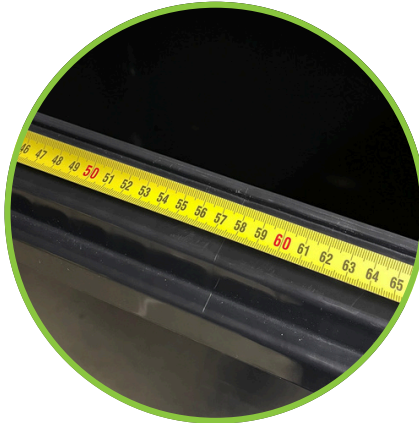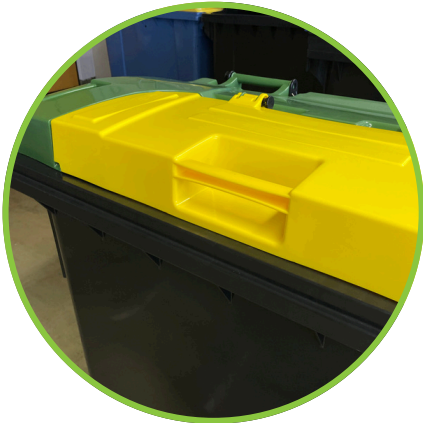


>>> STEP 2

Transfer the marking from the bin body to the small lid.

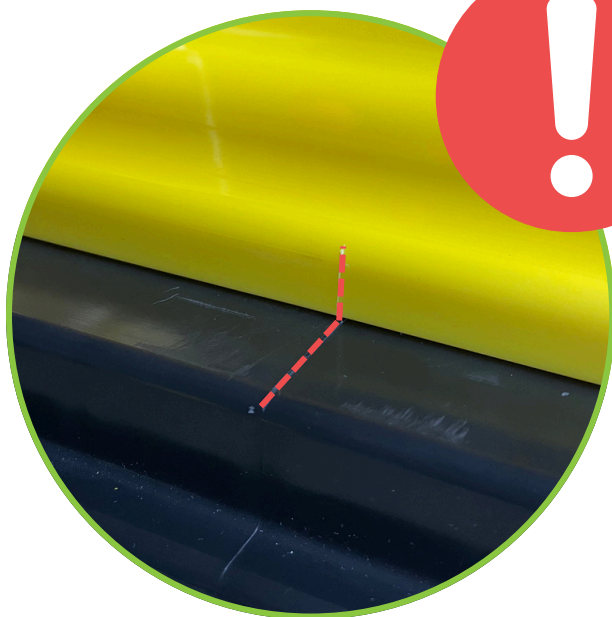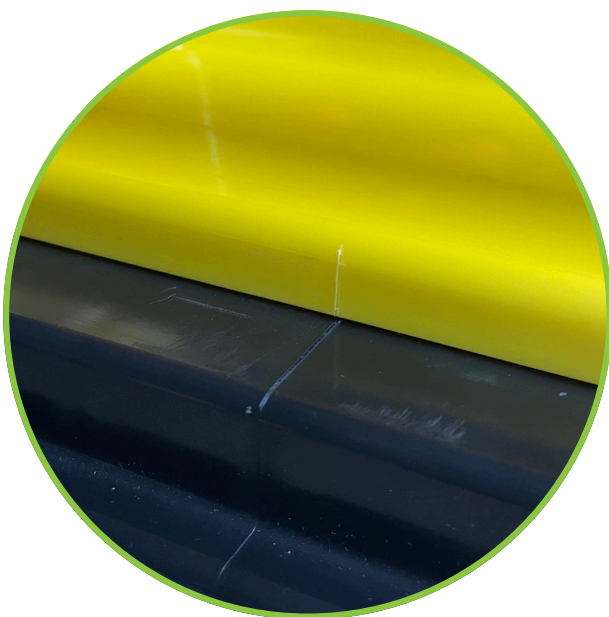


>>> STEP 3

Position and align the drilling template on the marking.

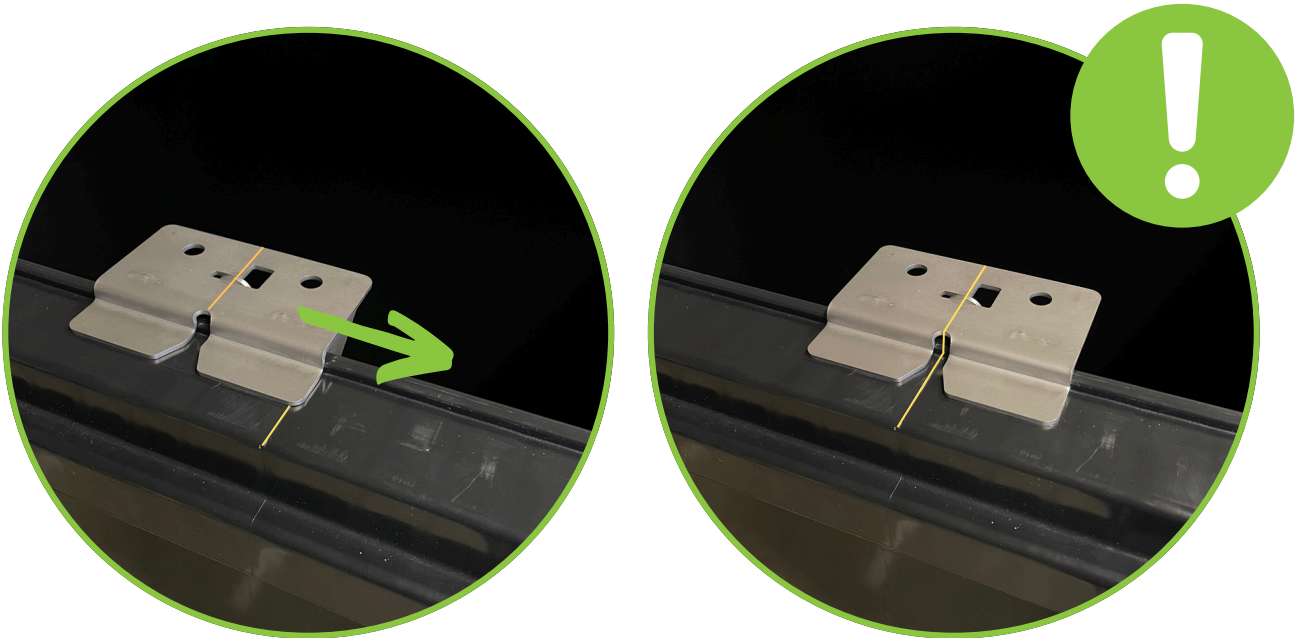


>>> STEP 4

*Move the **adjustable slide** to the **uppermost position** and **tighten** the **star knob screws** **lightly**, allowing the slide to remain **movable**.*

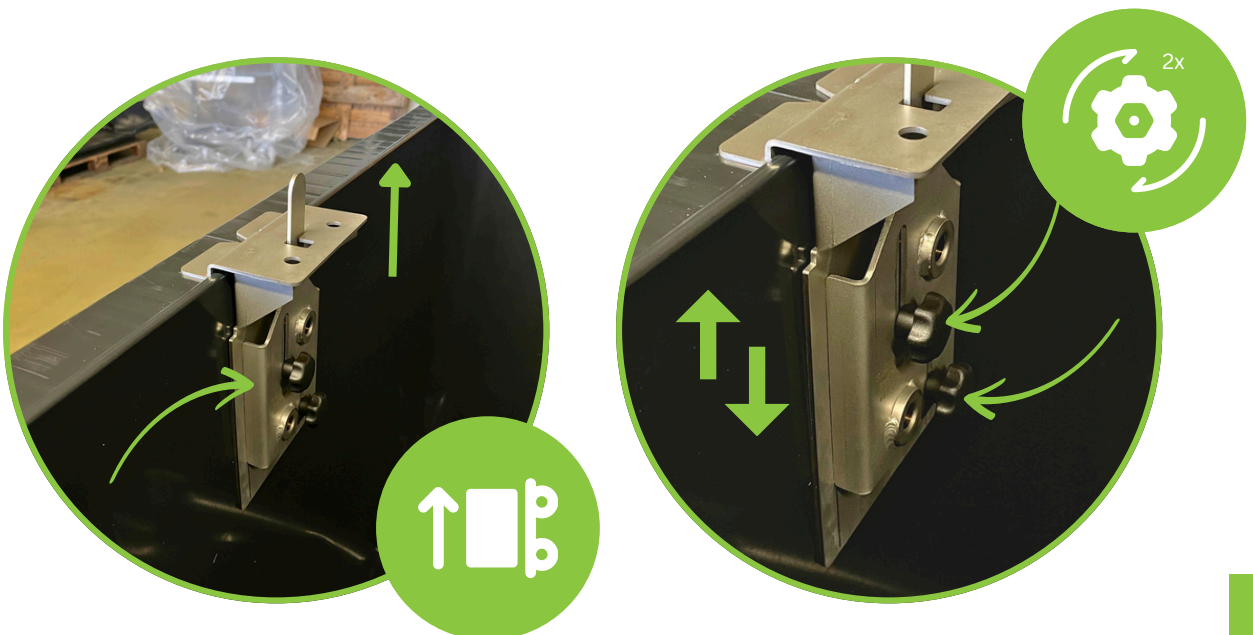



>>> STEP 5

Slowly close the small lid so that the slide is pressed down and positioned correctly for drilling; then, open the small lid again.

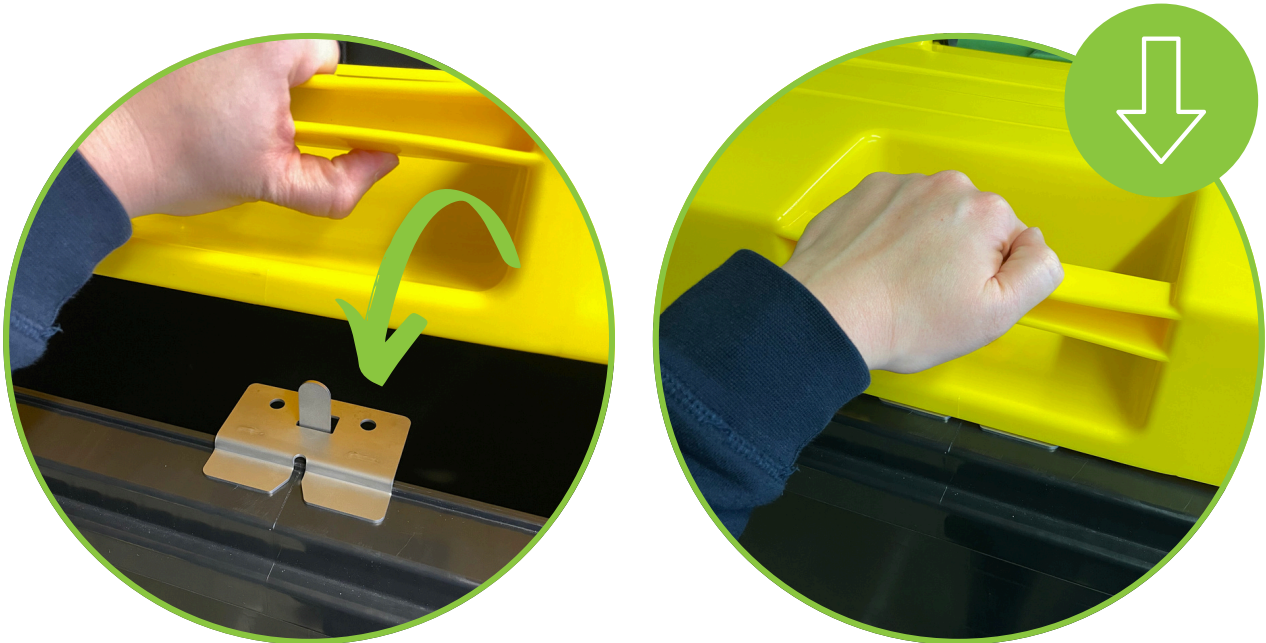



>>> STEP 6

Tighten the star knob screws on the drilling template **securely**. **Check** the **position** of the **drilling template** on the **center marking** again and then drill both holes with a $\varnothing 10$ mm **wood drill**.

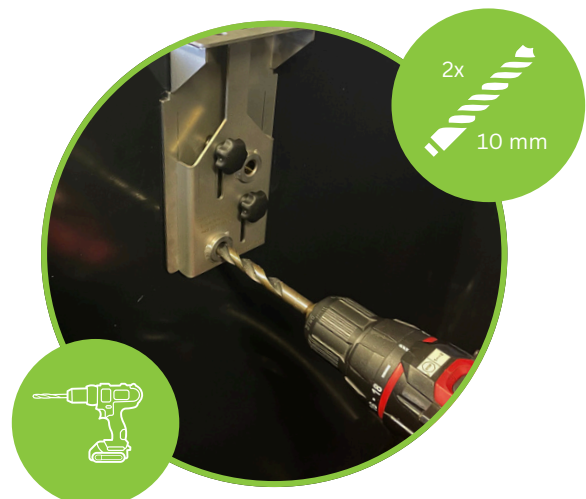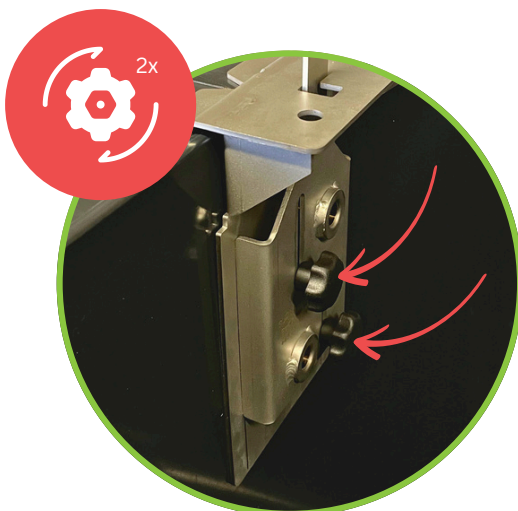


>>> STEP 7

*Loosen the **star knob screws** on the adjustable slide and move the slide to the **lowest position**.*

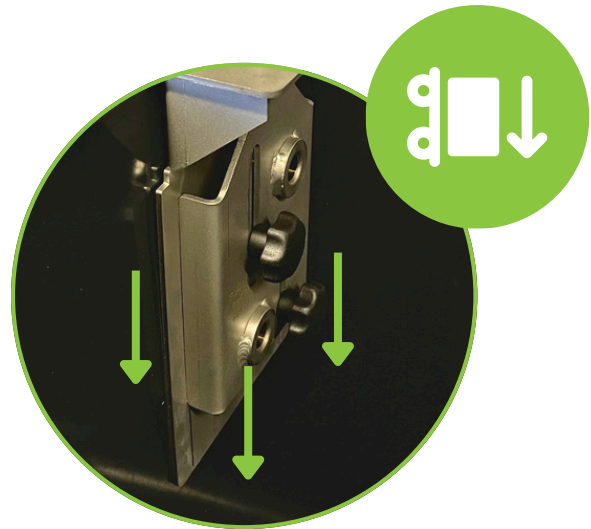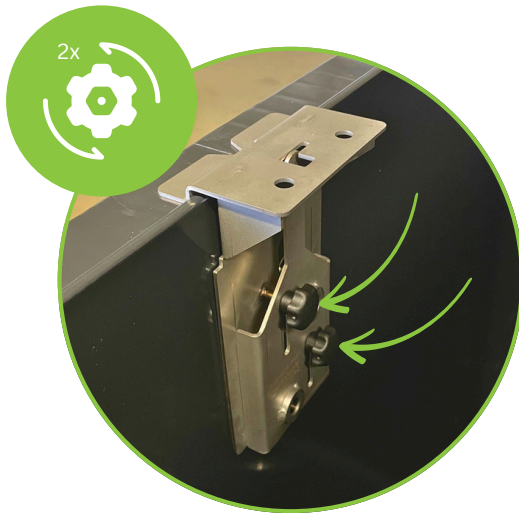


>>> STEP 8

*Place the **stamping plate** on the drilling template to **mark the small lid**; the alignment is guided by the drilling template (preventing incorrect assembly).*

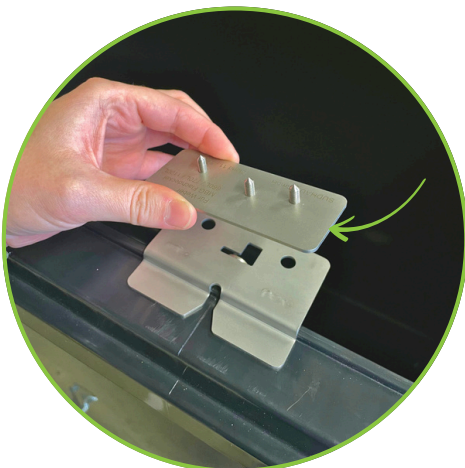


>>> STEP 9

*Close the small lid and apply pressure to the stamping plate so that the **markings** are transferred on the lid.*

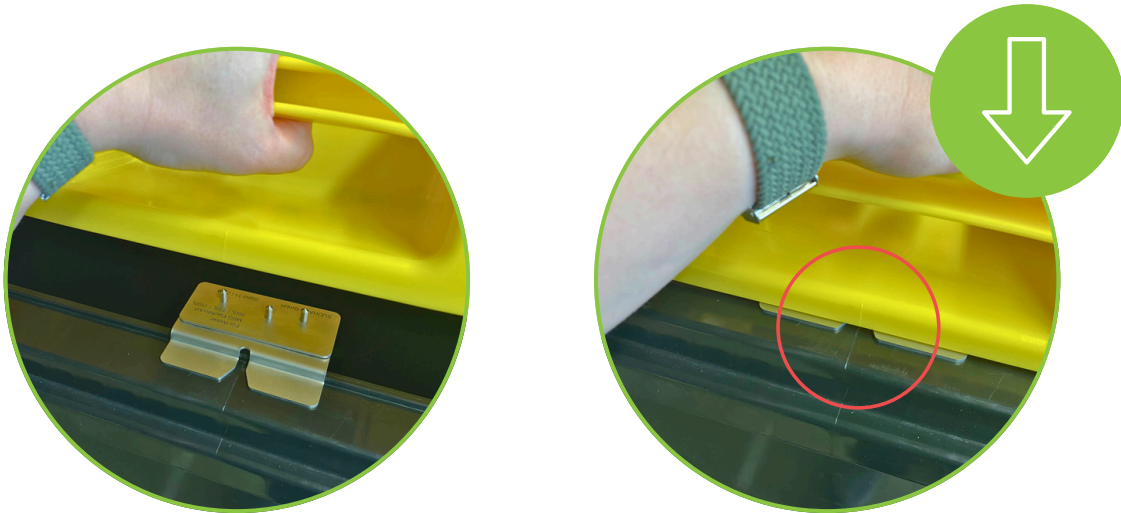



>>> IMPORTANT NOTE!

*Please make sure that **when pressing**, the small lid is **correctly aligned** with the **bin body**. The markings must **align** and be **flush**.*

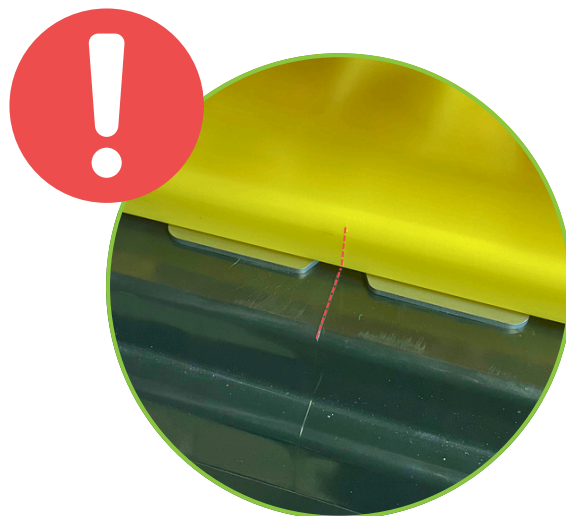

>>> STEP 10

*Check the markings on the lid and **drill the holes**:
left and right Ø10 mm, center Ø12 mm (use a wood drill).*

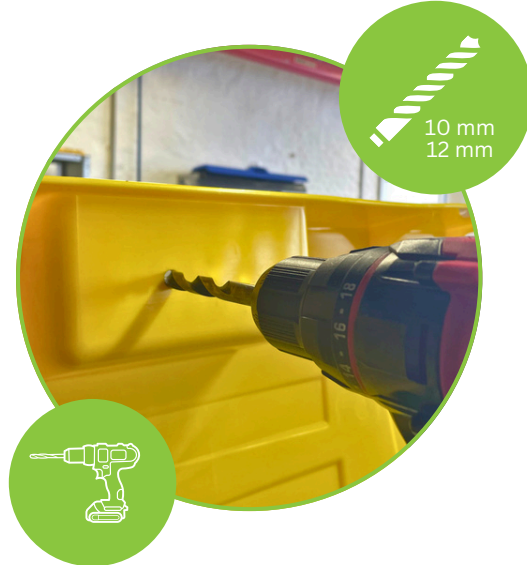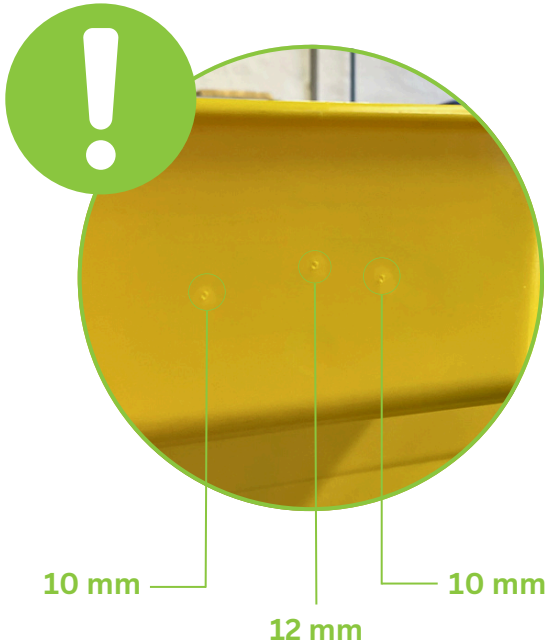**>>> ADDITIONAL INFORMATION!**

>>> STEP 11

*Assemble the **dustbin lock**, consisting of the bottom lid, top lid, bushing part, screws and bin body, correctly and then perform a **functionality test**.*



1x upper lid part
1x lower lid section
2x torx screws



1x bin section
1x bushing part
2x torx screws

>>> IMPORTANT NOTE!

*Please pay attention! The maximum tightening torque of the TORX screws:
2 – 2.5 Nm.*






>>> ADDITIONAL INFORMATION AND SUPPORT

Visit our website for more information and updates.
Scan the QR codes to access the online document
directly or download the latest version.

>>> document

Scan to access or
download the latest
version of our online
document.

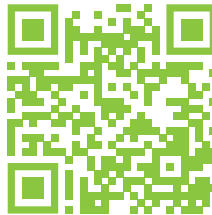

DE


www.sudhaus.de/DE2300-600

EN

www.sudhaus.de/EN2300-600

>>> compatibility lists

Scan to check the
compatibility of the dustbins.

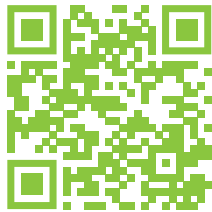

Type A



Type B

DE/EN

www.sudhaus.de/TypA

www.sudhaus.de/TypB

>>> website

Scan to visit our
website for general
information about
dustbin locks.



www.muelltonnenschloss.com

www.sudhaus.de

>>> contact

For direct support,
please contact us via
email or phone.

 **+49 2371 9060**

 **info@sudhaus.de**

INSTRUCTIONAL VIDEO



DIY SET

Now available on our website!

www.muelltonnenschloss.com

A video demonstrating the assembly of the trash can lock with cardboard templates on YouTube.

Available in English and German.



INFORMATION



BIOLOGIC FILTERDECKEL

Together with the company BIOLOGIC, we recommend the use of the Bio-Filter Lids including our dustbin lock.

For further information, please visit our partner:

- www.biologic.de

